

VTM-LCD173P VTM-LCD193P

17" & 19" Professional LCD Monitors





- 17" or 19" LCD Display Panel
- VGA, Dual Looping BNC Composite, S-Video, and Component Video Inputs with Video A/B Switch
- Resolution up to 1280 X 1024
- Contrast Ratio of 700:1
- Front Panel Controls
- OSD Menu Programming
- Built-In Speakers
- VESA Standard Mounting 100

SAFETY WARNING

Thank you for purchasing our product.

Please read this user's manual thoroughly and understand it before operating the monitor. Also, please keep this manual handy so you can always make quick references.

Please observe the following safety warnings.

- 1. Do not open the cabinet and external cover.

 The high voltage inside of this product may cause the electric shock.
- 2. Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide. Disassembly or alteration may result in high voltage electrical shock. Internal inspections, alterations and repairs should be conducted by qualified service personnel authorized by the distributor or the customer help desk.
- 3. Do not insert or drop any foreign materials such as metals or flammable object through the ventilation.
 - It may cause fire, electric shock or breakdown.
 - If any foreign material is inserted inside of this product, turn off the power, unplug from the power socket and contact the service desk.
- 4. Do not place any vase, potted plant, cup, medication and any container with any liquid on this product. In case of a spill, it may short the circuit boards, resulting in electric shock or fire.
- 5. Do not allow the equipment come into contact with, or become immersed in, water or other liquids. Do not allow liquids to enter the interior. The unit has not been waterproofed. If the exterior comes into contact with liquids or salt air, wipe it dry with a soft, absorbent cloth. In the event that the water or other foreign substances enter the interior, immediately turn the unit's Power off or unplug the power cord from the power outlet. Continued use of the equipment may result in fire or electrical shock. Please consult the with the customer help desk.
- 6. Never touch the antenna lie or power plug during a lightening storm. It may cause an electric shock.
- 7. The internal parts may fall out of place or break off when the unit is struck, or an object is dropped on the unit, thus causing malfunctions. Furthermore, loose parts may be the cause of fire, electric shock or breakdown.
- 8. Wipe the dust off of the power cable and power plug periodically. Dusty power plug may cause the poor insulation and collect moisture, thus creating a fire hazard.
- 9. Do not cut, damage, alter or place heavy items on the power cord. Any of these actions may cause an electrical short circuit, which may lead to fire or electrical shock.
- 10. Do not handle the unit or power cord if the hands are wet. Handling it with wet hands may lead to electrical shock. When unplugging the cord, ensure that you hold the solid portion of the


- plug. Pulling on the flexible portion of the cord may damage or expose the wire and insulation, creating the potential for fires or electrical shocks.
- 11. Plug the power cord in firmly into the wall socket. A loose plug may cause electric shock or become a fire hazard by the heat generated by the electric current.
- 12. Do not overload the power socket by connecting the recommended number of devices. The use of devices such as power strips and splitters in combination with a non-rated power socket may cause fire.
- 13. Stop operating the unit immediately if it emits smoke or noxious fumes. Failure to do so may result in fire or electrical shock. Immediately turn the unit's power off, remove the power cable from the power outlet. Confirm that smoke and fume emissions have ceased. Please consult with the customer help desk.
- 14. Do not cover the ventilation opening or slots on the outer casing. To prevent the unit from overheating, provide at least four inches of air space around the vent and the slots.
- 15. Do not place the unit at an unstable location such as on a hanging prop or tilted place. Damages may incur if the unit is tilted over or fall off the prop.
- 16. Do not place the unit at a place with moisture, dust or poisonous gas. It may cause the fire.
- 17. Avoid Strong Magnetic Fields. Never place the unit in close proximity to electric motors or other equipment generating strong electromagnetic fields. Exposures to strong magnetic fields may cause malfunctions or corrupt images.
- 18. Avoid using, placing or storing the unit in places subject to strong sunlight or high temperatures, such as the greenhouse or trunk of a car. Exposure to intense sunlight and heat may cause unit to overheat, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing. Ensure that there is good ventilation when using the unit.
- 19. Use only the recommended power accessories. Use of power sources not expressly recommended for this unit may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.
- 20. Do not use substances containing alcohol, benzene, thinners or other flammable substances to clean or maintain the unit. The use of these substances may lead to fire. Use a dry cloth on a regular periodic basis and wipe away the dust and dirt that collects on the device. In dusty, humid or greasy environments, the dust that collects around the ventilation or the slots on the outer casing over long periods of time may become saturated with humidity and short-circuit, leading to fire.

TABLE OF CONTENTS

SAFETY WARNING	
	,
	O

I. MONITOR LAYOUT

1.1 FRONT

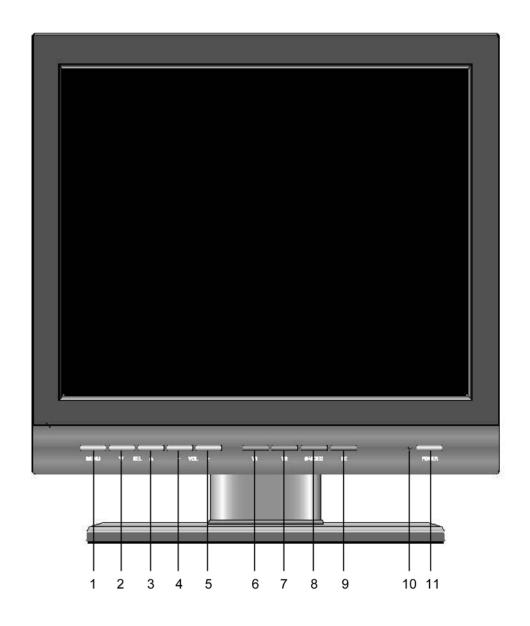

1. MENU BUTTON

Press this button to display the monitor menu.

2. SELECT DOWN

Press this button to navigate down in the menu. This button also decreases the value of a selected item.

3. SELECT UP

Press this button to navigate up in the menu. This button also increases the value of a selected item.

4. VOLUME DOWN

Press this button in the main screen to decrease the audio volume.

5. VOLUME UP

Press this button in the main screen to increase the audio volume. In the menu screen, this button selects the highlighted item.

6. VIDEO 1

Press this button to select video input 1. If VIDEO 1 is selected, then the button will remain lit.

7. VIDEO 2

Press this button to select video input 2. If VIDEO 2 is selected, then the button will remain lit.

8. S-VIDEO

Press this button to select S-VIDEO input. If S-VIDEO is selected, then the button will remain lit.

9. PC

Press this button to select the D-SUB VGA input. If PC is selected then the button will remain lit.

10. STATUS LED

Displays the status of the monitor:


- ① Constant Green: the monitor is powered on and the video signal is present.
- ② Flashing Green (PC only): the monitor is powered on, but the video signal is absent or it's in power save mode.
- ③ Off: the monitor is off.

11. POWER BUTTON


This button powers on or off the monitor.

1.2 REAR

VTM-LCD173P

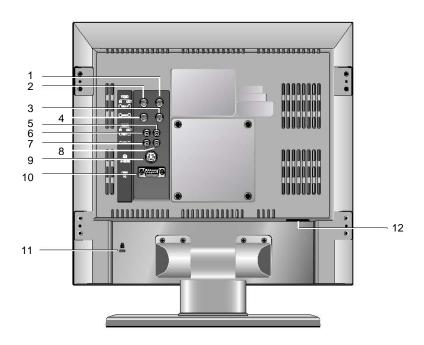

VTM-LCD193P

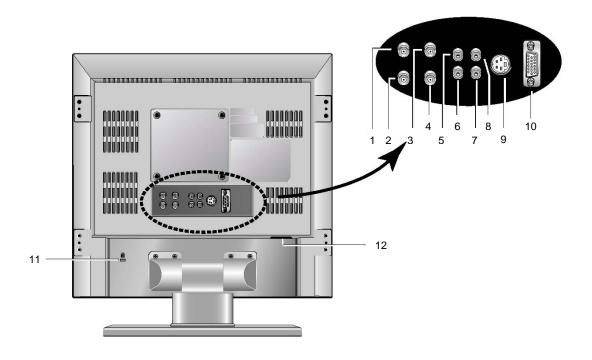

1. VIDEO 1 LOOP OUT Composite BNC video output 75 Ohms

VIDEO 1 INPUT Composite BNC video input 75 Ohms.

3. VIDEO 2 LOOP OUT Composite BNC video output 75 Ohms.

4. VIDEO 2 INPUT Composite BNC video Input 75 Ohms.

5. AUDIO 1 LOOP OUT RCA audio output.

6. AUDIO 1 INPUT RCA audio input.

7. AUDIO 2 INPUT RCA audio input.

8. AUDIO 2 LOOP OUT RCA audio output.

9. S-VIDEO INPUT 4-pin S-VIDEO input.

10. D-SUB VGA INPUT 15-pin VGA input.

11. KENSINGTON LOCKHOLE


Anti-theft lock mechanism compatible with Kensington Locks.

12. AC POWER INPUT 100VAC ~ 240VAC (50/60Hz) power input.

II. PROGRAMMING THE MONITOR

2.1 VIDEO 1, VIDEO 2 and S-VIDEO

Press the menu button to access the monitor menu.

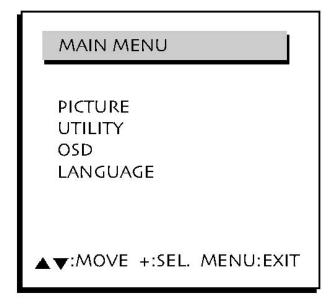

2.1.1 PICTURE

2.1.1.1 Color Temperature

Select the color temperature of the monitor. 9300 offers more of a blue tint compared to the 6500.

2.1.1.2 Contrast

Adjust the contrast of the picture.

2.1.1.3 Brightness

Adjust the brightness of the picture.

2.1.1.4 Color

Adjust the color saturation of the picture.

2.1.1.5 Sharpness

Adjust the sharpness of the picture.

2.1.1.6 Tint

Adjust the hue of the picture.

2.1.2 UTILITY

2.1.2.1 All Blue

Force the screen to have a blue tint.

2.1.2.2 Overscan

Expand the screen size in the increments 5%, from of 0% to 10%.

2.1.3 OSD (On Screen Display)

2.1.3.1 OSD Timeout

Select the duration of the menu display time before it automatically exits from 5 to 60 seconds.


2.1.3.2 OSD Transparency

Select the transparency of the menu in the increments of 20% from MIN to MAX.

2.1.4 LANGUAGE

Select from English, Français, Deutsch, Espanol, Danish and Italiano.

2.2 PC

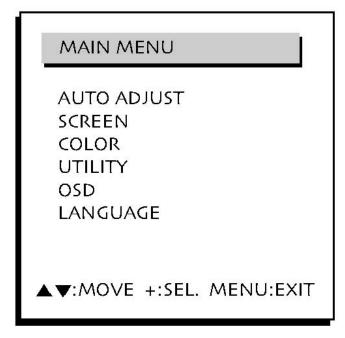

2.2.1 AUTO ADJUST

The screen is adjusted automatically to its optimal settings based on the VGA signal.

2.2.2 SCREEN

2.2.2.1 Brightness

Adjust the brightness of the picture.

2.2.2.2 Contrast

Adjust the contrast of the picture

2.2.2.3 H. Position

Adjust the horizontal position of the picture

2.2.2.4 V. Position

Adjust the vertical position of the picture.

2.2.2.5 Phase Adjust

Adjust the phase of the picture.

2.2.2.6 Clock Adjust

Adjust the spread of the horizontal size through increasing or decreasing the number of pixels.

2.2.3 COLOR

2.2.3.1 Color Temp

Select the color temperature of the monitor. 9300 offers more of a blue tint compared to the 6500. The USER reflects the values adjusted from the RED, GREEN and BLUE tint adjustments.

2.2.4 UTILITY

2.2.4.1 Recall

Reset all monitor settings back to factory default.

2.2.4.2 Full Auto

Optimize the screen by recalibrating the color values.

2.2.5 OSD (On Screen Display)

Please see 2.1.3

2.2.6 LANGUAGE

Please See 2.1.4

III. SPECIFICATIONS

	VTM-LCD173P	VTM-LCD193P	
Dot Pitch	0.264	0.294	
Maximum Resolution	SXGA (1280 x 1024)		
Sound Input	0.5W		
Speaker	Max 2W. 8 Ohm 30 x 70 mm		
Power Source	AC 100V ~ 240V 50/60Hz		
Power Consumption	33 Watts	37 Watts	
Brightness	300 cd/m ²	300 cd/m ²	
Dimensions	15.35 x 16.73 x 7.08 inches	16.92 x 17.56 x 8.66 inches	
Without Stand	15.35 x 16.73 x 2.55 inches	16.92 x 17.56 x 2.71 inches	
Weight	13.23 lbs	15.43 lbs	
Without Stand	10 lbs	11.25 lbs	
	Video Channel 1, 2 In/Out		
Terminals	Audio Channel 1, 2 In/Out		
reminais	S-Video In		
	PC In		

