Package Includes

1. Box Contents

- 1) VTD-AR2D4FN IP Infrared Dome camera
- 2) Mounting Accessories
- 3) Mini CD

2. Included Accessories

3mm Hex L-wrench

Wall mounting screws

Qty: 3

 
Anchors

If necessary, use the anchor to help secure the self tapping screws.

Qty: 3

Mini CD with Product Documentation

Qty: 1



QUICK START GUIDE

™VITEK®




- 1/2.9" Sony® CMOS
- 2.4 MegaPixel With full 1080p/720p Output
- Up to 30fps live view @ 1920x1080 (1080p)
- Built in 3.6mm Megapixel Fixed Iris Lens
- Automatic True Day/Night
- H.264/MJPEG Dual Streaming
- 24 IR LEDs with up to 60' Range
- Micro SD memory card slot for Local recording
- Advanced OSD Functions: Motion Detection & Privacy Masking
- Heavy Duty IP66 rated weather/vandal resistant aluminum construction
- Designed for Ceiling Mount Applications
- 12VDC & PoE (Power over Ethernet) Operation

Specifications & installation procedure subject to change without notice. Visit www.vitekcctv.com for the most current information available.





Dimensions

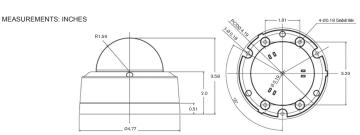

Layout



- (b) Dome Cover


- @ IR LEDs
- © Dome Polycarbonate Bubble
- ¶ Rubber Gasket

 § Output

 § Ou
- h IP Reset Button
- i Lens Release Clamps ① Micro SD Card Slot



Connections

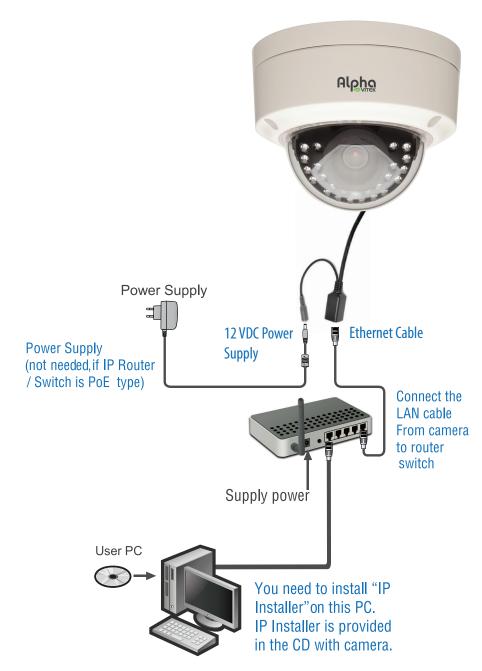

IP Setup

- Execute IP Installer on Desktop.
- Press Scan button. IP cameras under the same router will be searched and listed.
 It takes a few seconds. Default IP address is 10.20.30.40

FW1175-FX-W

3 Select searched product, and press

Auto-IP setting

button.

Select searched product, and press

Auto-IP setting

Auto-IP setting

Auto-IP setting

Auto-IP setting

Auto-IP setting

00306fabcdef

10.20.30.40

static servername

- 4 Change the Server Name here.
- 5 Check Http port and put 80 . This is an internal port
- 6 IP address: You may use auto-scanned IP as it is or you may set Static IP as below.

Typical IP setting is as follows.

IP address.: 192.168.0.254(you can change the last column)

Netmask: 255.255.255.0 Gateway: 192.168.0.1

DNS1/2: You can copy the PC's network properties.

This is for Internet environment.

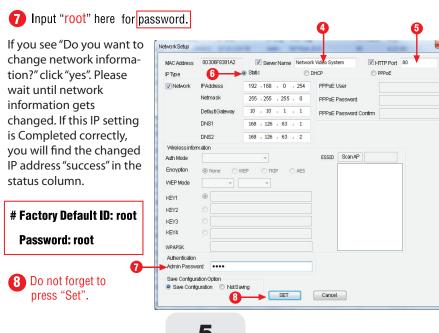


Image Viewing under the Same Router

• Please double click the selected product or click "homepage" after select product on the list.





- Please click "Liveview" on top right of the screen.
- * If the PC is internet-connected, Active X control should be downloaded as follows, No. 3



- 3 Please click yes for "ActiveX Control
- * If the PC is not internet-connected, you need to install SmartViewer.exe in the CD provided with camera.



Only after installation of Active X or Smart Viewer, you can view live images.


Live view main screen

6

Advanced

for advanced settings of IP cameras, please refer to **VITEK** Web Admin User's manual.



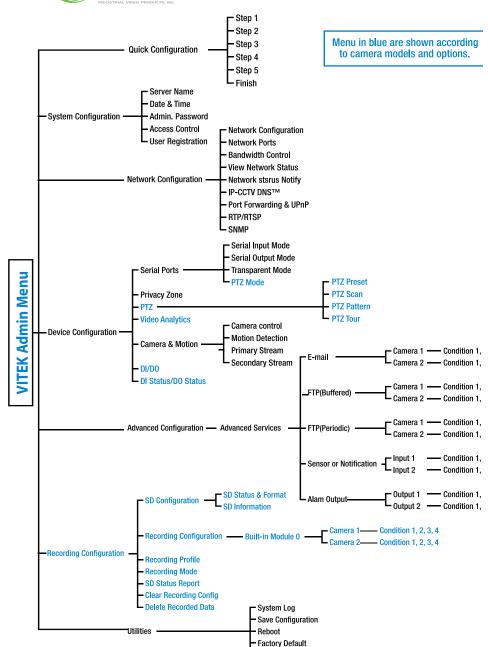

7

LIMITED LIABILITY WARRANTY

VITEK products carry a three (3) year limited warranty. VITEK warrants to the purchaser that products manufactured by VITEK are free of any rightful claim of infringement or the like, and when used in the manner intended, will be free of defects in materials and workmanship for a period of three (3) years, or as otherwise stated above, from the date of purchase by the end user. This warranty is nontransferable and extends only to the original buyer or end user customer of a VITEK Authorized Reseller.

The product must have been used only for its intended purpose, and not been subjected to damage by misuse, willful or accidental damage, caused by excessive voltage or lightning.

The product must not have been tampered with in any way or the guarantee will be considered null and void.

This guarantee does not affect your statutory rights.

Contact your local VITEK Reseller should servicing become necessary.

VITEK makes no warranty or guarantee whatsoever with respect to products sold or purchased through unauthorized sales channels. Warranty support is available only if product is purchased through a VITEK Authorized Reseller.

